



Changing paper thickness on Mac OS X 10.9 to 10.13


1. Click on «Show Details».

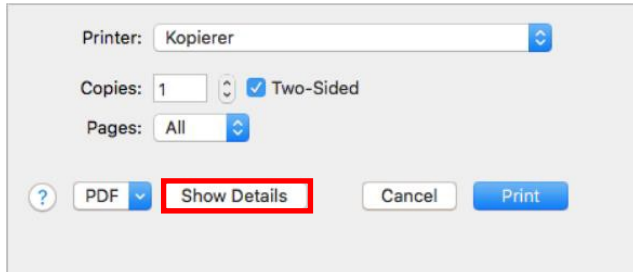


2. On the right side open the dropdown under «Orientation» (see image).

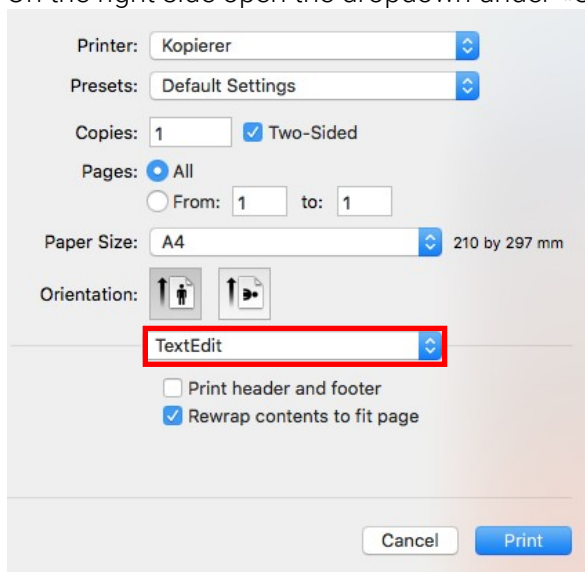

3. At the dropdown select «Printer Features».

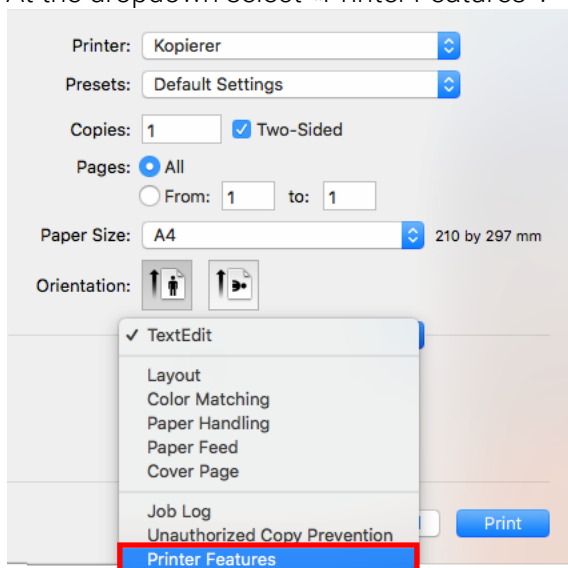

4. For Mac OS X versions 10.9 to 10.11 choose at «Feature Sets» «General 3»

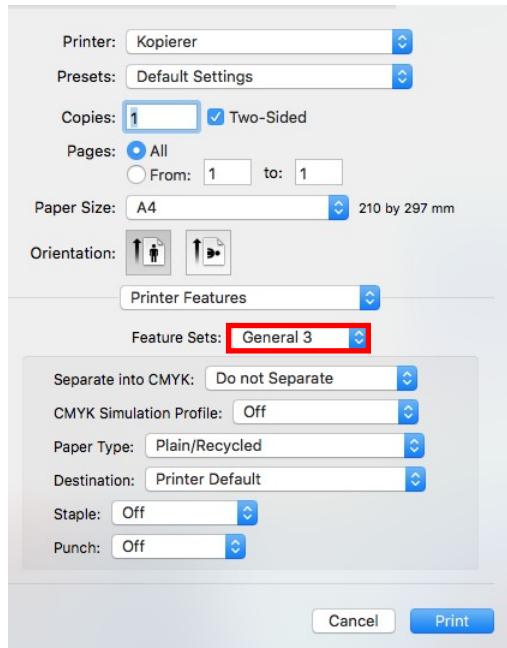

5. Scroll down to the item «Paper Type» and select the desired thickness.

